 
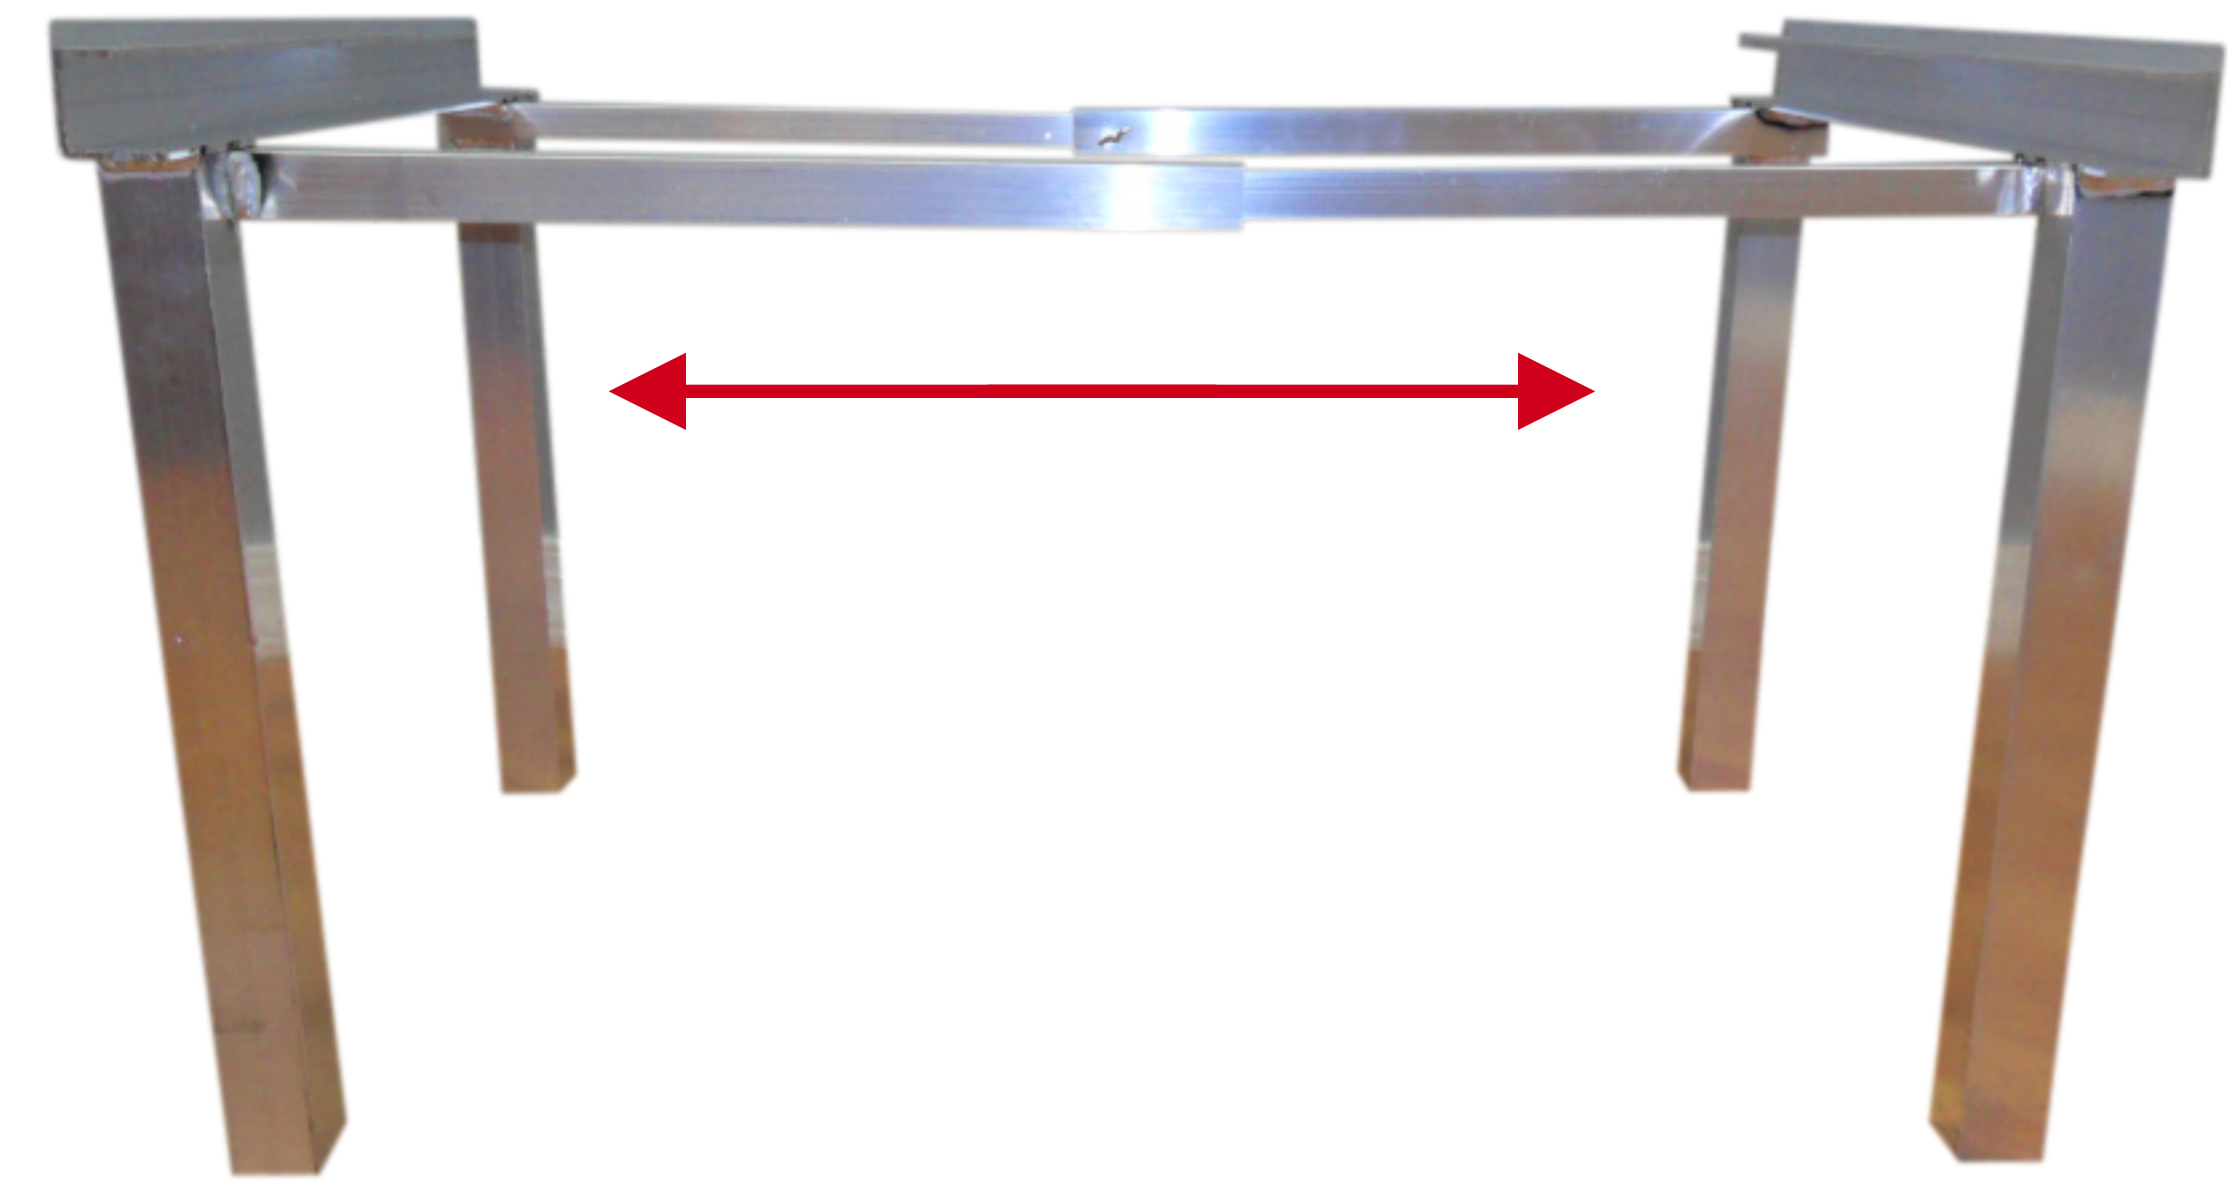 


AIR HANDLER & HEAT PUMP STANDS

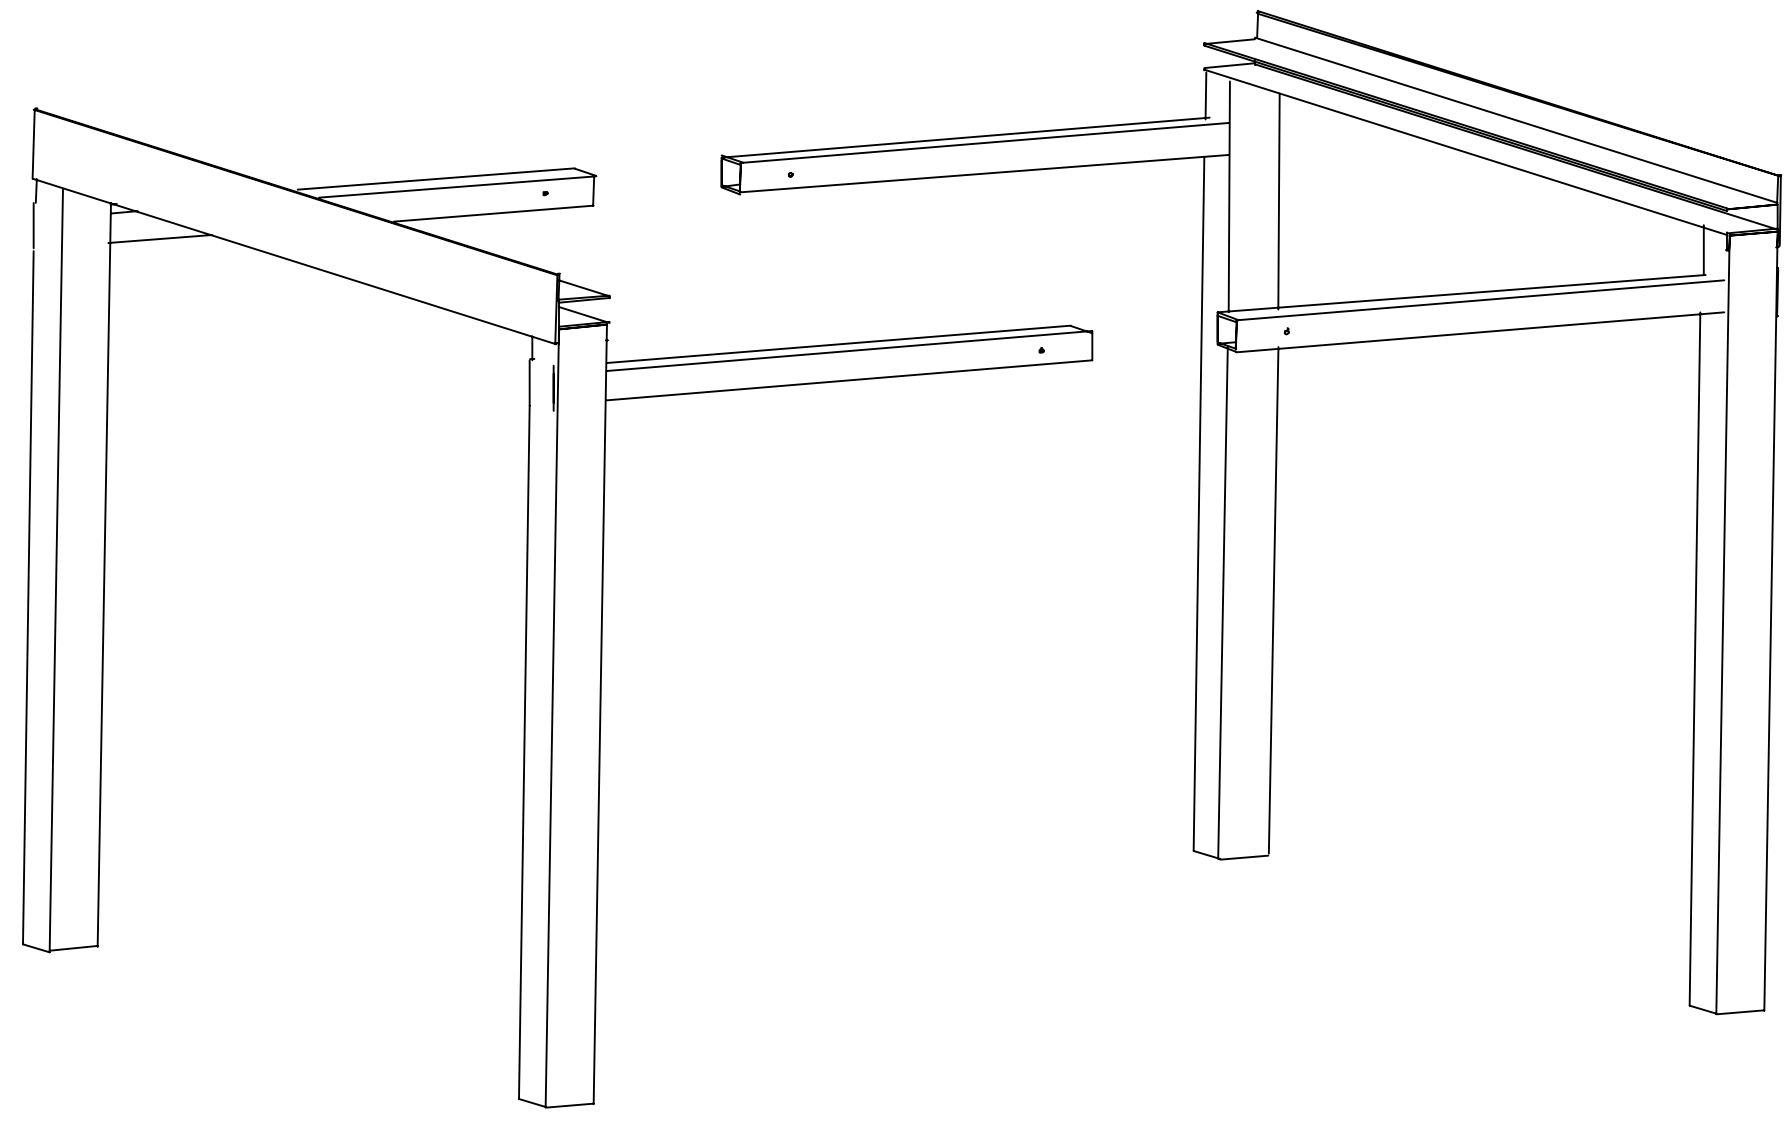 


AIR HANDLER STAND / LIGHT

Part Code	Description	Size
FLS1822	18" Tall 22" Deep - Width adjustable 13"-25"	18"-22"
FLW1822	18" Tall 22" Deep - Width adjustable 16"-28"	18"- 22" W
FLS2422	24" Tall 22" Deep - Width adjustable 13"-25"	24"-22"
FLW2422	24" Tall 22" Deep - Width adjustable 16"-28"	24"-22"W
FLS3022	30" Tall 22" Deep - Width adjustable 13"-25"	30"-22"
FLW3622	36" Tall 22" Deep - Width adjustable 16"-28"	36"-22"W

AIR HANDLER STAND / HEAVY DUTY

Part Code	Description	Size
AHDS1822	18" Tall 22" Deep - Adjustable Width 14"-24"	18"-22"
AHDW1822	18" Tall 22" Deep - Adjustable Width 17.5"-30"	18"- 22" W
AHDS2422	24" Tall 22" Deep - Adjustable Width 14"-24"	24"-22"
AHDW2422	24" Tall 22" Deep - Adjustable Width 17.5"-30"	24"-22"W
AHDS3622	36" Tall 22" Deep - Adjustable Width 14"-24"	36"-22"
AHDW3622	36" Tall 22" Deep - Adjustable Width 17.5"-30"	36"-22"W

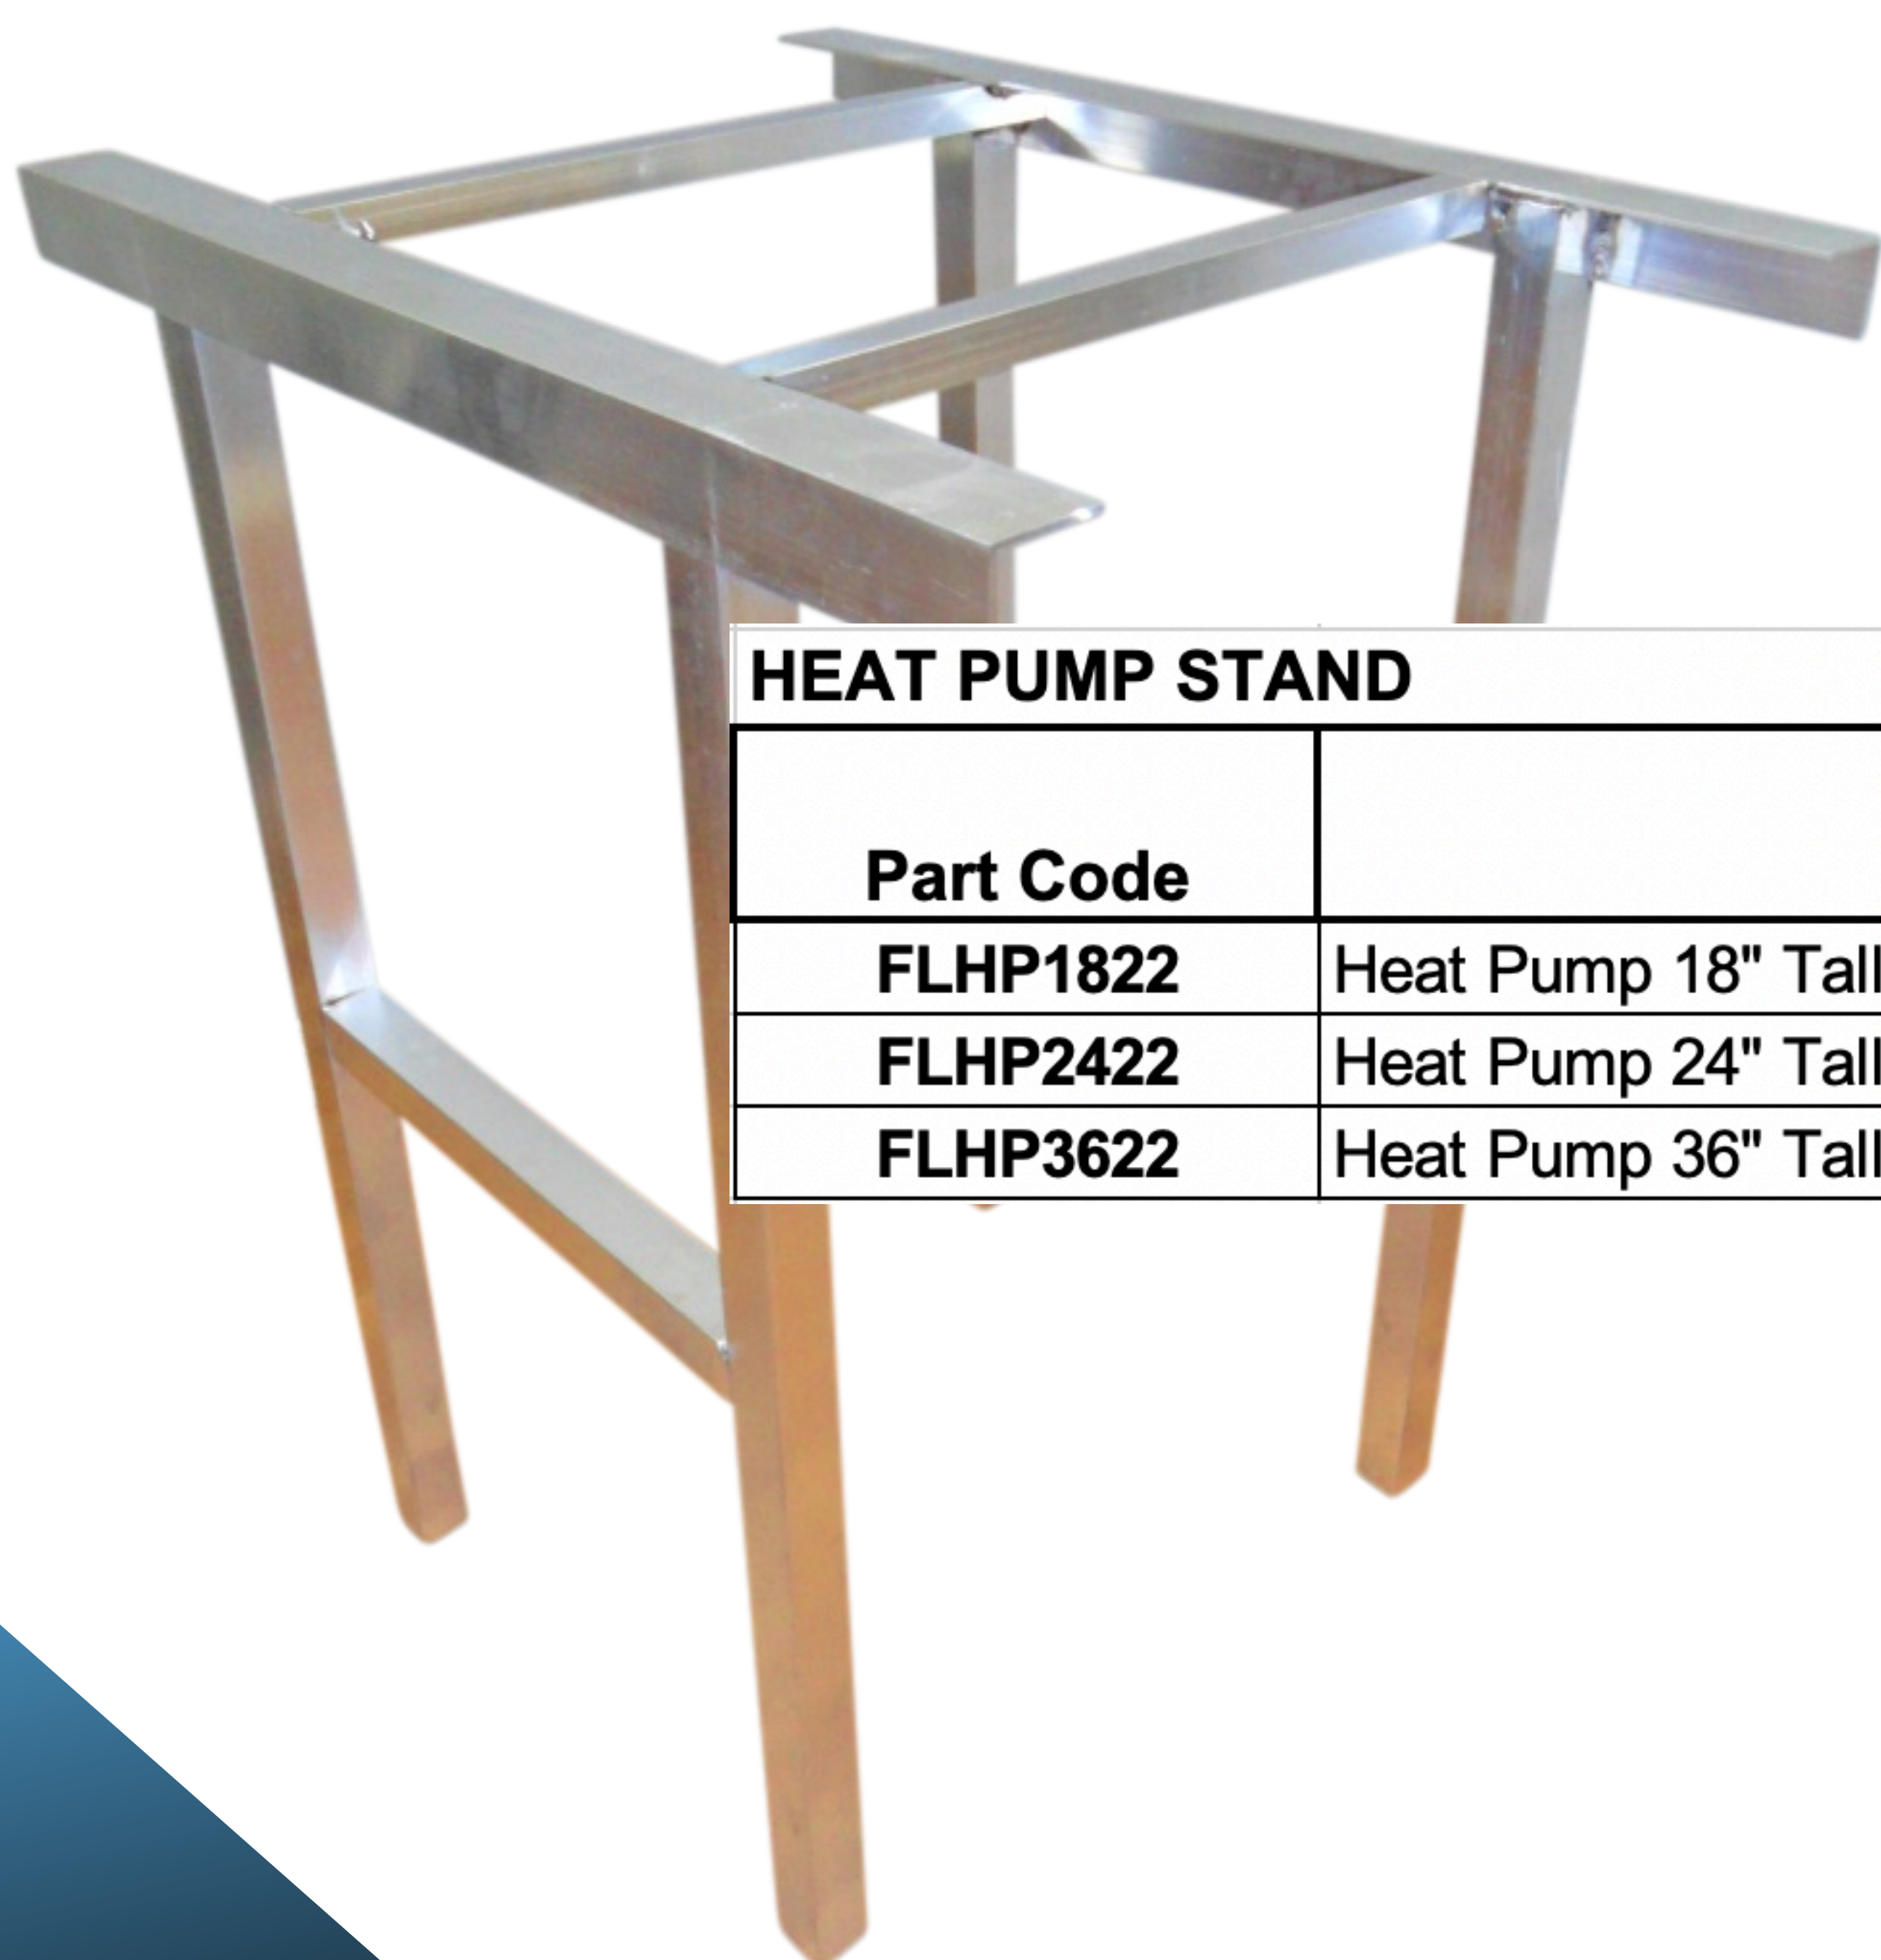

HEAT PUMP STAND

Part Code	Description	Size
FLHP1822	Heat Pump 18" Tall x 16" to 26" Wide x 22" Deep	18"-22"
FLHP2422	Heat Pump 24" Tall x 16" to 26" Wide x 22" Deep	24"- 22"
FLHP3622	Heat Pump 36" Tall x 16" to 26" Wide x 22" Deep	36"-22"